

1. Remove outer clutch plate.
2. Push the clutch away from the crank gear as shown by the direction of the green arrow.
A gap will form on the opposite side, shown in blue.
3. Squirt a teeny bit of grease where shown.
4. Turn the ring gear around about 1/3 turn and repeat 2 more times for a total of 3 squirts.

